


EUREKA

We live and breathe clean.™

ATLANTIS
EXPRESS

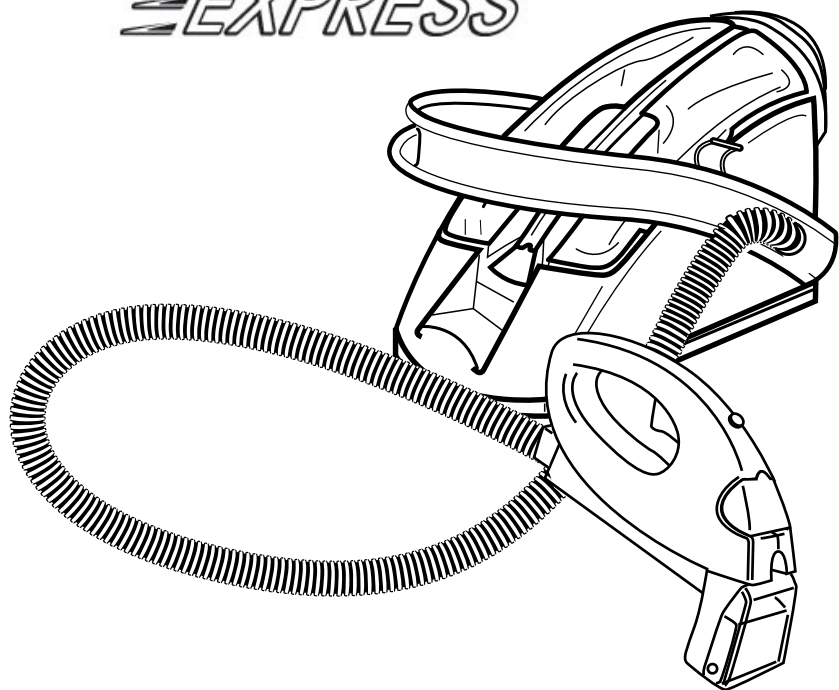

Portable Deep Cleaner

Household Type

OWNER'S GUIDE 2550 Series

IMPORTANT

Do not return to the store. For assembly problems or questions, for replacement of broken or missing items, or to order replacement parts and accessories to be shipped direct to you contact: Eureka Customer Service toll free at 1-800-282-2886, 8 a.m. to 7:30 p.m. (CST), Monday - Friday and 10 a.m. to 6:30 p.m. Saturday. Or visit our web site, www.eureka.com

PLEASE RETAIN

We suggest you record the model, type and serial numbers below. They are located on the silver rating plate on your cleaner. For prompt and complete service information, always refer to these numbers when inquiring about service.

Model & Type _____

Serial No. _____

It is also important to keep your receipt as proof of date of purchase.

*En Mexico llame al (55) 5343-4384

Index

Important Safeguards	2
General Information	2
Grounding Instructions	3
Feature Guide	3
Before You Begin	4
Set Up	5
Use	5
Clean Up & Storage	6
Trouble Shooting	7
Warranty	7
Customer Order Form	9

GENERAL INFORMATION



NOTE: Thoroughly clean carpet, upholstery and stairs with a vacuum cleaner before using this portable deep cleaner.

Automatic Suction Shut-Off

The automatic suction shut-off functions when the recovery tank is full of liquid. As the tank fills, the float (inside the recovery tank) rises until it shuts off the suction causing the motor sound to become high pitched. When this happens, empty the recovery tank.

Service Information

The instructions in this booklet serve as a guide to routine maintenance. For additional service information telephone our toll free number for the nearest Eureka Authorized Warranty Station. **You should know the model, type and serial numbers when you call:**

USA: 1-800-282-2886

Mexico: (55) 5343-4384

Canada: 1-800-282-2886

If you prefer, you can write to:

Electrolux Home Care Products North America, Service Division. P.O. Box 3900, Peoria, IL 61612, USA. In Canada write to Electrolux Home Care Products North America, 866 Langs Drive, Cambridge, Ontario N3N 2N7. Refer to The Eureka Limited Warranty for complete service information.



DO NOT OIL the motors at any time. The bearings have a seal and are permanently lubricated.

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS WET PICKUP VACUUM CLEANER.

WARNING

To reduce the risk of fire, electric shock, or injury.

- Do not immerse product. Use only on surfaces moistened by cleaning process.
- Do not use outdoors or expose to rain.
- Use only Eureka brand cleaning solutions intended for this machine application.
- **Do not leave the portable deep cleaner when plugged in.** Turn OFF the switch and unplug the electrical cord when not in use and before servicing.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If the portable deep cleaner is not working properly, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center immediately.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run the portable deep cleaner over cord. Keep cord away from heated surfaces.
- Connect to a properly grounded outlet only (refer to Grounding Instructions).
- Do not use extension cords or outlets with inadequate current carrying capacity.
- Do not carry appliance while in use.
- Turn off all controls before unplugging.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or portable deep cleaner with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- This portable deep cleaner creates suction. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot fireplace or barbecue ashes.
- Do not use without recovery tank in place.
- Use extra care when cleaning on stairs.
- If the machine tips over during use, shut it off immediately, set it upright, and wait for the motor to stop completely. This allows the float to return to normal position and permits proper airflow through the cleaner.
- Do not use to pick up gasoline, acetone, perfumes, colognes, paint thinners and other flammable liquids or use in places where they may be present.
- Operate and store indoors in an area above 32°F where the machine will not freeze.
- Keep your work area well lighted.
- Use appliance only on level surfaces.

SAVE THESE INSTRUCTIONS

Grounding Instructions

This appliance must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This appliance is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

DANGER

Improper connection of an equipment-grounding conductor can result in risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded. Do not modify the plug provided with the appliance. If it will not fit the outlet, have the proper outlet installed by a qualified technician.

This appliance is for use on a nominal 120 volt circuit and has a grounding plug that looks like the plug illustrated in Figure A. A temporary adapter which looks like the adapter illustrated in Figure B may be used to connect this plug to a two-pole receptacle, as shown, if a properly grounded outlet is not available. The temporary adapter should be used only until a properly grounded outlet, Figure A, can be installed by a qualified electrician. The green colored rigid ear, lug, or the like extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used, it must be held in place by a metal screw.



NOTE: In Canada, the use of a temporary adapter is not permitted by the Canadian Electrical Code.

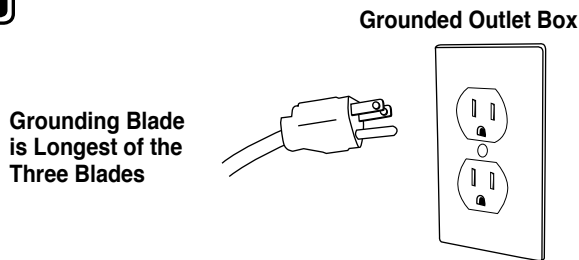


Figure A

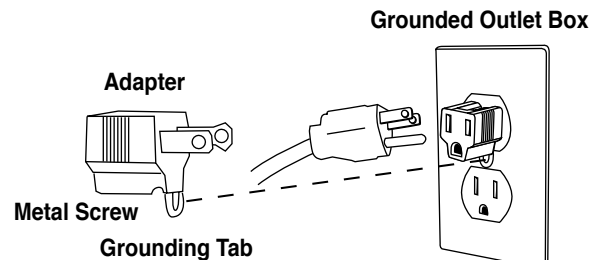



Figure B

Feature Guide



NOTICE

YOU MAY NOTICE SMALL WATER DROPLETS IN THE WATER LINE. THIS IS DUE TO THE FACT THAT ALL UNITS ARE 100% INSPECTED ON THE PRODUCTION LINE USING WATER TO ASSURE PROPER FUNCTION OF THE ACCESSORIES.

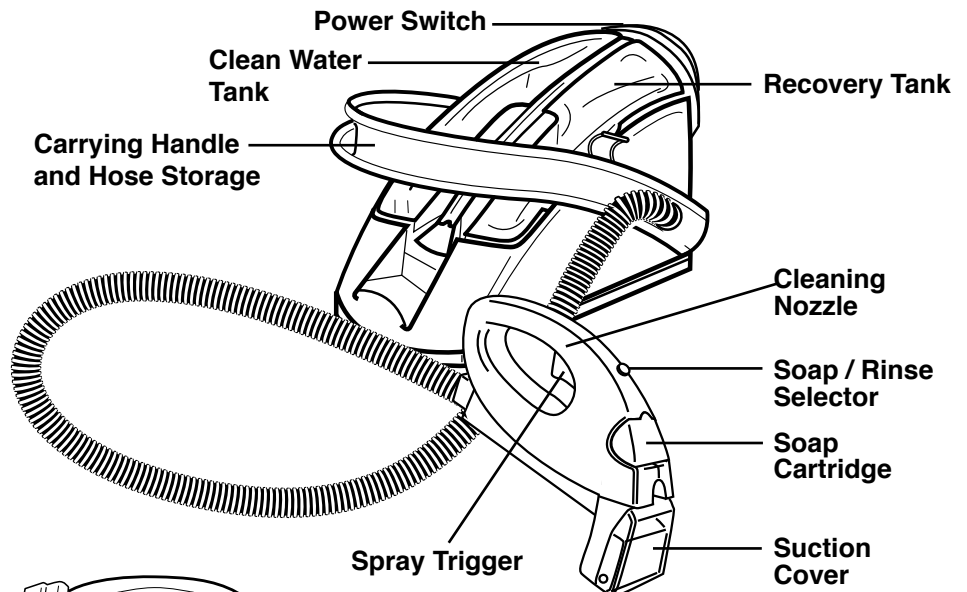


Store Electrical Cord

- Wrap cord around cord hooks and fasten plug to cord.

Quick Release Cord Hook

- Rotates left and right to allow for easy cord removal.

Quick Release
Cord Hook

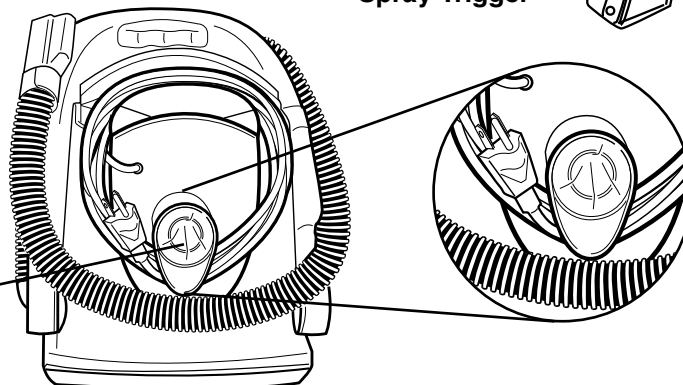

BEFORE YOU BEGIN

Deep Cleaning Carpet



NOTE: Never use this portable deep cleaner as a standard vacuum cleaner.

For best results, remove all large, solid debris from the spot with a cloth before you begin to clean.

Use only genuine Eureka branded cleaning solution. Try our New and Improved Multi-Surface Cleaning Concentrate. Visit www.eureka.com for more information.

Pretest for Color Fastness

Before cleaning the carpet, we recommend testing the carpet for color fastness. Moisten a white towel with the cleaning solution. Test a small hidden area of the carpet in a closet or in a corner. Gently rub the cloth over the carpet. Check each color. If the towel does not pick up any color, it should be safe to use the cleaning solution on the entire area. See below for additional information.

Helpful Hints for Spot-Cleaning Carpet

Follow the instructions in this owner's guide. Here are a few extra hints that will make spot cleaning carpet easier.

- Before you begin using the portable deep cleaner remove all large, solid debris from area to be cleaned.
- **Do not use the portable deep cleaner for dry vacuuming as this can damage the unit.**
- Use consistent forward and reverse strokes over the carpet surface.
- Ventilate the room while cleaning to speed drying.

Do Not Use on Oriental rugs.

After Cleaning

- Allow carpets to dry thoroughly. Try to keep children and pets off the carpet until it is completely dry.
- Use towels or white cloths to step on if you must walk on the area before it is dry.
- Wipe cleaning solution from woodwork and wood furniture immediately to prevent damage to the wood or upholstery.

Upholstery and Stair Cleaning

Vacuum Upholstery or Stairs

Vacuum upholstery and stairs with a vacuum cleaner's attachment tool. Use a crevice tool for hard to reach areas such as tufts and corners.

IMPORTANT: Cleaning some upholstery fabrics with a wet cleaning solution may damage the fabric. Know what the fabric content is and how to clean it before using a cleaning solution on upholstery fabrics.

Most manufacturers care code their fabrics with cleaning methods. Some very delicate and unusual fabrics are DRY CLEAN ONLY. If in doubt of the fabric type, call a dealer or take a cushion or arm cover to a dealer for advice.

Fabric Code Ratings:

- **W** for wet clean.
- **S-W** for solvent-dry or wet clean.
- **S** for solvent-dry clean only. Do not wet clean.

Check the stuffing material if possible

Look inside the cushions or on the underneath side. If filling is a dark color, it may bleed through and discolor the fabric. Most stuffing material that is white to light yellow is colorfast and will not bleed colors through to the fabric covering.

Pretest for Color Fastness

Before cleaning the upholstery, we recommend testing it for color fastness. Moisten a white towel with the cleaning solution. Test a small area of the cushion back. Gently rub the cloth over the area. Check each area for color bleeding. If the towel does not pick up any color, it should be safe to use the cleaning solution on the entire area.

Test clean a hidden area


Be sure to test clean a hidden area several hours before starting to clean. Let the test area dry completely. Inspect for changes in color, bleeding, stretching, or shrinking. Test another area if in doubt.

EXPRESS SET UP

NOTE: Familiarize yourself with the parts of the portable deep cleaner by reading this owner's manual before using.


A. Fill Soap Cartridge

1. Remove cleaning nozzle from storage position.
2. Pull out the soap cartridge, remove the cap and fill with Eureka All Purpose Shampoos and Concentrates only.
3. Close cap tightly and replace soap cartridge. Cartridge must be fully seated in place to function correctly.

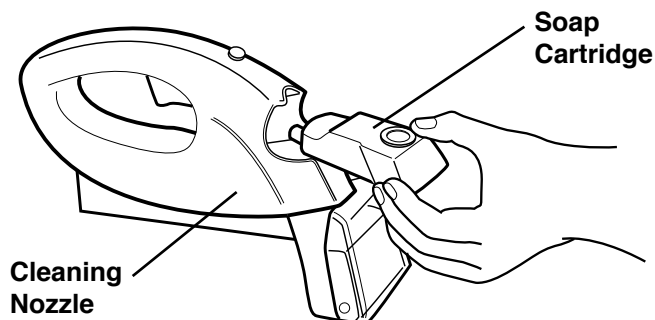

B. Fill Clean Water Tank

1. Lift up and pull out clean water tank.
2. Fill tank with hot tap water (not boiling), replace cap.
3. Gently push until the clean water tank is fully seated into position. Wait 20 seconds to allow liquid to fill system before use.


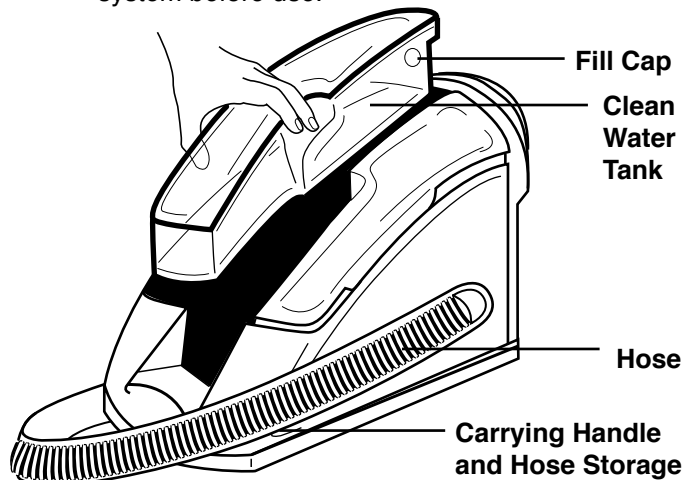


EXPRESS USE

IMPORTANT: For best results, remove all solid material from the area before using the portable deep cleaner.

WARNING : Never carry this portable deep cleaner when motor is running. Use only on level surfaces.

1. Remove cleaning nozzle from storage position.
2. Unhook hose from storage handle.
3. Connect cleaning nozzle to hose. Ensure locking tab is in place.
4. Push power switch to "ON" position

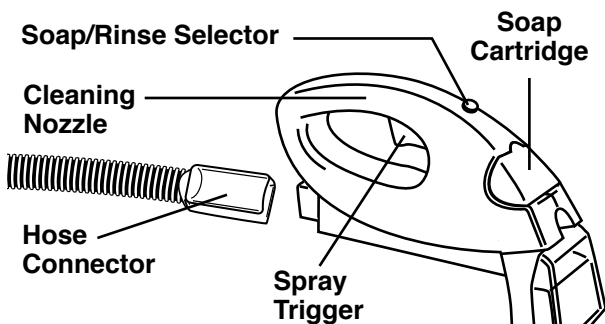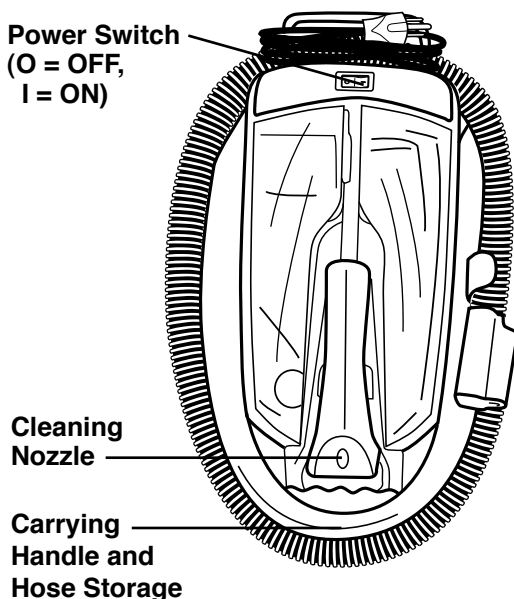

5. Move the soap/rinse selector to the "Soap" setting.
6. Holding the nozzle approximately 1-inch above the surface to be cleaned, squeeze the spray trigger. Pull the nozzle backward at a moderate pace for no more than 5 seconds to avoid over soaking.
7. Release the spray trigger to stop the solution flow.
8. Place the brush of the cleaning nozzle directly onto surface. Gently scrub the spot by moving the cleaning nozzle forward and backward across spot applying light pressure. As the nozzle moves over the surface, it picks up the dirty water and places it in the recovery tank.
9. Move the nozzle over the carpet/upholstery several more times without pushing the spray trigger. This removes excess water and helps the carpet/upholstery dry faster.
(For best suction results, slightly tilt nozzle forward for a more direct contact between suction cover and carpet or upholstery.)
10. For clean water rinse, move the soap/rinse selector to the rinse setting, squeeze the spray trigger and repeat step 6 through 9.
11. For heavily soiled areas, repeat this procedure as needed.

NOTE : During initial use, clean water may not be dispensed immediately from the hose. With unit on, depress trigger and wait approximately 4 seconds for water to travel from tank and through the hose.


EXPRESS CLEAN UP AND STORAGE

Before storing the portable deep cleaner for long periods of time, it is a good idea to set the soap/rinse selector control to shampoo, remove the soap cartridge and squeeze the spray trigger for 10 seconds. This flushes the shampoo residue from the system. Place cleaner on a surface where water can easily be cleaned up.

A. Emptying the Recovery Tank

CAUTION: Turn off the power switch and unplug the spot cleaner to empty the recovery tank.

1. Pull straight up to remove the recovery tank from the unit.
2. Remove the cap (see illustration) and empty contents into a suitable water drain.
3. Rinse out the waste water recovery tank thoroughly. Visually check to ensure automatic shut-off (float) is operational and free of any lint. If not operational, continue to rinse recovery tank.
4. Gently push the tank all the way into unit until secure.
5. Resume cleaning or store.

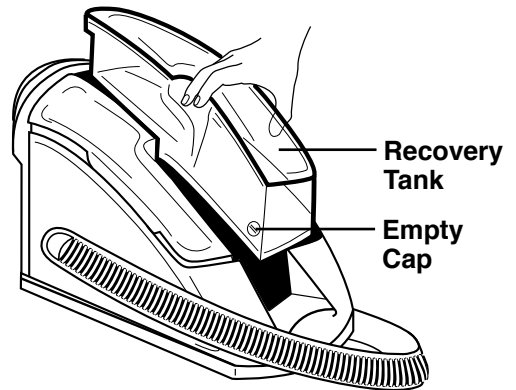

Automatic Shut-Off


The automatic suction shut-off functions when the waste water recovery tank has reached capacity. This can be detected by a noticeable difference in the motor sound. Immediately turn off the unit when this happens and empty the recovery tank.

NOTE: The recovery tank fills to just below the empty cap.

B. Clean Suction Cover

CAUTION: Turn off the power switch and unplug the electrical cord before cleaning.


1. Unsnap and tilt the suction cover forward. Suction cover does not come off completely.
2. Rinse suction cover with water, removing dirt and lint.
3. Replace the suction cover by tilting it back and snapping it in place.

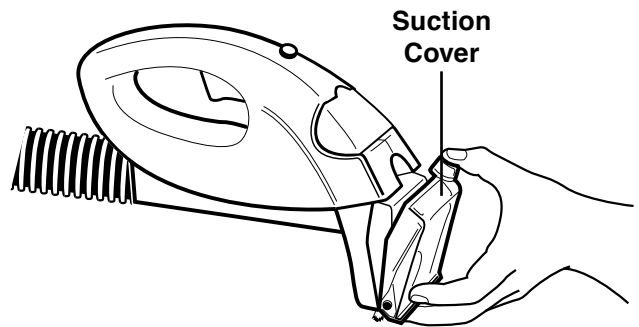

C. Storing Hose and Cleaning Nozzle

1. Rinse out hose and cleaning nozzle with clean water before storing. Set the soap/rinse selector to "Soap", remove the soap cartridge and squeeze the spray trigger for 10 seconds.
2. Remove cleaning nozzle from the hose and place in storage section between tanks.
3. Wrap hose around carry handle and snap back in place.
4. Place carry handle in down position.

NOTE: When removing cleaning nozzle from the hose, insure that both nozzle and hose are held below the unit and over a sink or bucket to drain excess water from hose.

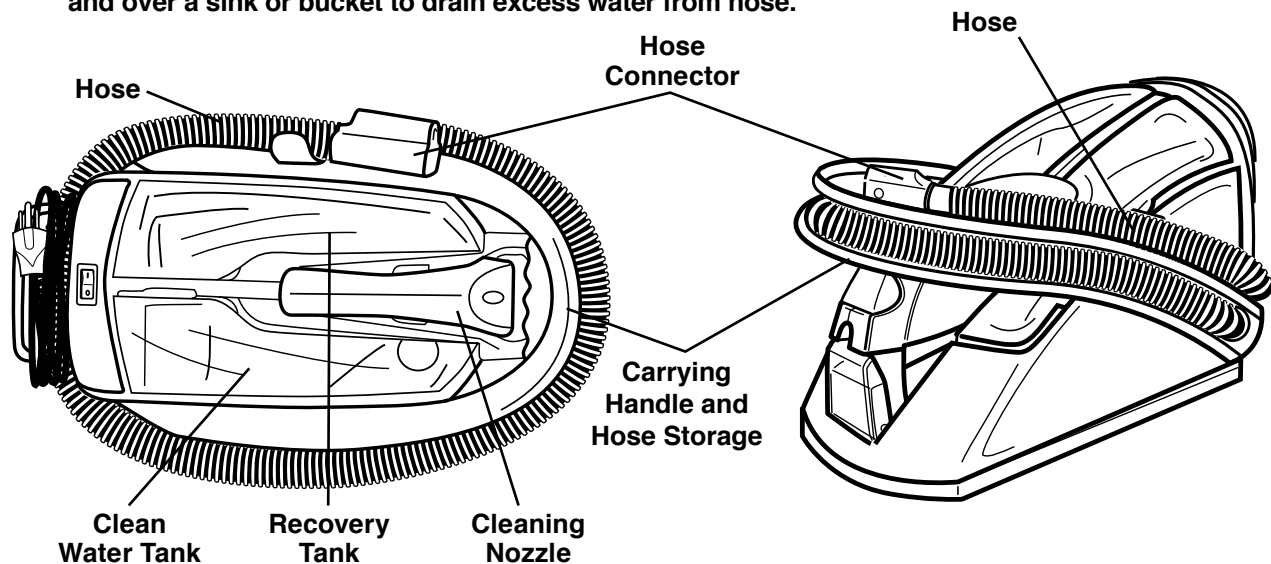

Trouble Shooting

CAUTION: Turn off the switch and unplug electrical cord before servicing.

PROBLEM	CAUSE	SOLUTION
Motor will not start	○ Electric Plug	□ Push plug securely into outlet, try another outlet or check circuit breaker
	○ Power switch is not turned ON	□ Make sure power switch is in ON position
Cleaning Solution and water are not released from the Cleaning Nozzle	○ Low water level in clean water tank	□ Check the water level in the clean water tank and refill
	○ Clean water tank or shampoo cartridge incorrectly installed	□ Be sure clean water tank and shampoo cartridge are both locked securely in place
	○ Clog in cleaning nozzle	□ Clear the cleaning nozzle of debris
	○ Cleaning nozzle not correctly installed	□ Make sure nozzle is fully engaged into hose connector (see pg 5.)
	○ Air lock in water line	□ With unit off, raise nozzle and hold the trigger for 4 seconds. Turn unit on to resume spraying.
Does not pick up the dispensed cleaning solution and water	○ Recovery tank is full	□ Empty the recovery tank and return to cleaner
	○ Recovery tank is not fully installed	□ Make sure recovery tank is securely locked in position
	○ Clear suction cover is not fastened correctly	□ Check to see that the suction cover is fastened properly (see pg 6.)
Minimal suction at the end of the hose	○ Cleaning nozzle is clogged	□ Remove any visible clogs from nozzle that may restrict airflow
	○ Cleaning nozzle not correctly installed	□ Make sure nozzle is fully engaged into hose connector (see pg 5.)
Suction shuts off prematurely	○ Excessive foam in the recovery tank	□ Use correct cleaning solution. Empty recovery tank and rinse with clean water
	○ Improper cleaning solution used	□ Use genuine Eureka All Purpose Shampoos and Concentrate

THE EUREKA LIMITED WARRANTY

What This Warranty Covers

Your Eureka cleaner is warranted to be free from all defects in material and workmanship in normal household use for a period of one year. The warranty is granted only to the original purchaser and members of his or her immediate household. The warranty is subject to the following provisions.

What This Warranty Does Not Cover

- Parts of the cleaner that require replacement under normal use, such as disposable dust bags, filters, drive belts, light bulbs, and brush roll bristles, impellers and cleaning.
- Damages or malfunctions caused by negligence, abuse, or use not in accordance with the Owner's Guide.
- Defects or damages caused by unauthorized service or the use of other than Genuine Eureka parts.

What the Manufacturer Will Do

The manufacturer will, at its option, repair or replace a defective cleaner or cleaner part that is covered by this warranty. As a matter of warranty policy, the manufacturer will not refund the consumer's purchase price.

Warranty Registration

Please fill out and return the warranty registration card accompanying your cleaner.

Obtaining Warranty Service

To obtain warranty service you must return the defective cleaner or cleaner part along with proof of purchase to any Eureka Authorized Warranty Station.

You will find the nearest location in the Yellow Pages, under "Vacuum Cleaners – Service and Repair." Be certain that the Warranty Station is "Eureka Authorized."

For the location of the nearest Eureka Authorized Warranty Station or for service information, telephone toll free:

USA: 1-800-282-2886 • Mexico: (55) 5343-4384 • Canada: 1-800-282-2886 • www.eureka.com

If you prefer you can write to Electrolux Home Care Products North America, P O Box 3900, Peoria, Illinois 61612, USA. In Canada write to Electrolux Home Care Products Canada, 866 Langs Drive, Cambridge, Ontario N3H 2N7.

If it is necessary to ship the cleaner outside your community to obtain warranty repair, you must pay the shipping charges to the Eureka Authorized Warranty Station.

Return shipping charges will be paid by the Warranty Station. When returning parts for repair, please include the model, type, and serial number from the data plate on the cleaner.

Further Limitations and Exclusions

Any warranty that may be implied in connection with your purchase or use of the cleaner, including any warranty of Merchantability or any warranty for Fitness For A Particular Purpose is limited to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

Your relief for the breach of this warranty is limited to the relief expressly provided above. In no event shall the manufacturer be liable for any consequential or incidental damages you may incur in connection with your purchase or use of the cleaner. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights. You may also have other rights which vary by state.



